

## LiveNoise LN2-EAR Noise Monitor



### Features

- Wall Mounted Noise Display
- Monitors, Analyses and Stores Sound Levels
- Network Connection (WiFi or wired Ethernet)
- Lights up when noise levels are too high
- IEC 61672 Class 2, ANSI S1.4 Type 2
- **No contract or annual fees**

### Applications


- Office Noise
- Hospital Noise
- Call Centres
- Libraries

### Overview

The noise warning sign and interface module can be mounted on a wall or other suitable surface. An optional adjustable VESA mount can be used for more secure or corner mounting if needed. It measures the sound levels in line with the noise measurement standards, stores the results, and sends them or to our cloud server.

### Live Noise and Reporting

You can view the live sound level at each noise monitor or you can view long-term reports over daily, weekly, monthly or custom periods. This is all done from your web browser after logging in to your LiveNoise account.

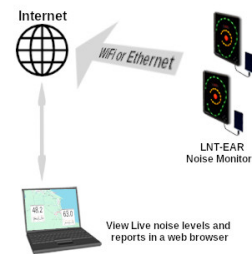

## LiveNoise LN2-EAR Noise Monitor

### Specifications

#### Technical Specifications

Acoustic Standards	IEC 61672-2:2002 Class 2
Frequency Range	ANSI S1.4 Type 2 20 Hz to 20 kHz
Measuring Range	30 to 120 dB
Deviation	± 0.5 dB
Frequency Weighting	"A" and "C"
Noise Measurements	Leq, Fast and Slow sound Level
Additional Outputs	0-10 V or 4-20 mA
USB Port	For USB memory stick configuration
Ethernet Port	RJ45 socket
Internal Memory	16 GB for up to 3 years storage
Dimensions	
Noise Warning Sign	265 x 205 x 46 mm, 10.4" x 8" x 1.8"
LiveNoise Terminal Power	70 x 88 x 29 mm, 2.8" x 3.5" x 1.2" 5 VDC, max 12W (power adapter included)

#### Dimensions

---

#### Head Office

NoiseMeters Ltd  
7 Jayes Park  
Ockley  
Surrey  
RH5 5RR

Telephone **+44 130 677 0855**  
Fax **+44 845 680 0316**

Email: **info@noisemeters.com**  
Support: **support@noisemeters.com**

#### Web Sites

Main site:  
<https://www.noisemeters.asia>

Product shortcut:  
<https://www.noisemeters.asia/product/livenoise/lnt-ear/>

Tech Support:  
<https://support.noisemeters.com>